

Please read this instruction manual carefully prior to installation. Keep this manual readily accessible for future reference.



ATTENTION

1. Upon installation, please ensure that your surrounding environment is clean, as it may affect its precision.
2. We shall not be held liable and shall not accept any liability, obligation, or responsibility whatsoever for any damage to the item during the course of assembly and/or disassembly.
3. Please seek professional assistance or advice if you are unclear about the instructions or have any doubts regarding the procedures.




SAFETY PRECAUTIONS

1. Do install right bearing size at the right place.
2. Avoid direct hammering onto the bearing.
3. Bearings should be install away from heavy dust or metalworking area.
4. The housing(crankcase) may require heating in case bearing mounted with an interference fit/tight fit.

1


FEATURES

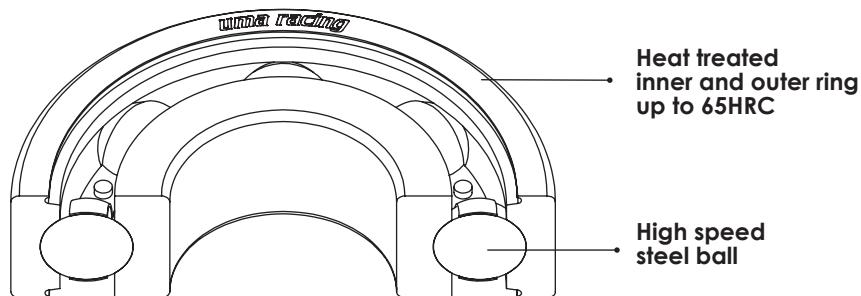


2

INSTALLATION GUIDE

Mounting Force

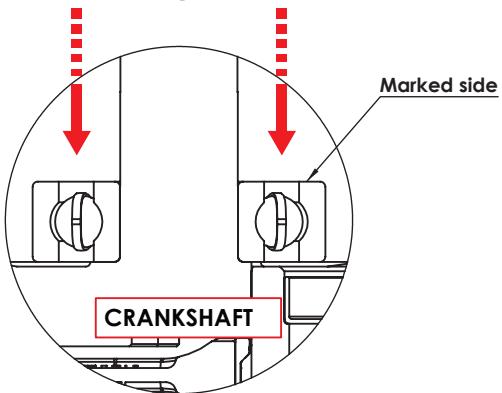

Mounting Force

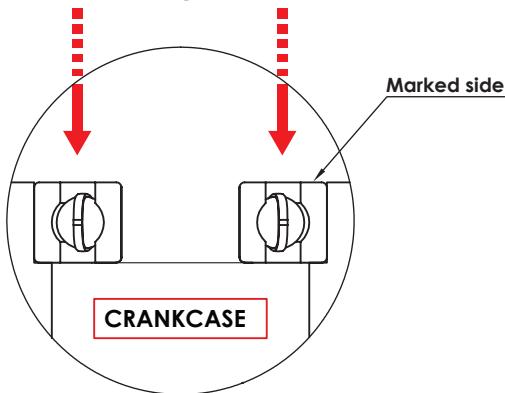

AVOID DIRECT HAMMERING ON BEARING

Caution:

- In crankcase, marked side faces the outside.
- In crankshaft, marked side faces the outside.

