



- Thank you for purchasing clutch.
- Before installation, please read the instruction carefully. We recommend that you store the instruction sheet in a safe place for future reference.

NOTICE

- To install, follow the steps as described in the manual. Any damages caused by not following directions voids warranty.
- Correct tools must be used for installation.
- Do not modify any parts unless specifically stated in the instruction manual.
- Interior controller maintenance should be performed by a professional only.

SYMBOL NOTE:

NOTE Read this information carefully regarding the essential features.

→ To smear engine oil before install

CAUTION! Some processes must be followed to avoid the damage to the vehicle.

1 Accessory

1 Pressure plate X 1



2 Clutch boss X 1



3 Clutch spring X 5



4 Disc spring X 1




5 Screw X 5



NOTE Please contact the local distributor if the items you open are not the same, as the above-listed one.


2 INSTALLATION INSTRUCTIONS

1. Locknut
2. Clutch spring
3. Pressure plate
4. Short clutch push rod
5. Clutch push rod holder
6. Ball
7. Friction plate
8. Clutch plate
9. Clutch boss nut
10. Disc spring
11. Clutch boss
12. Thrust washer
13. Clutch housing
14. Conical spring washer

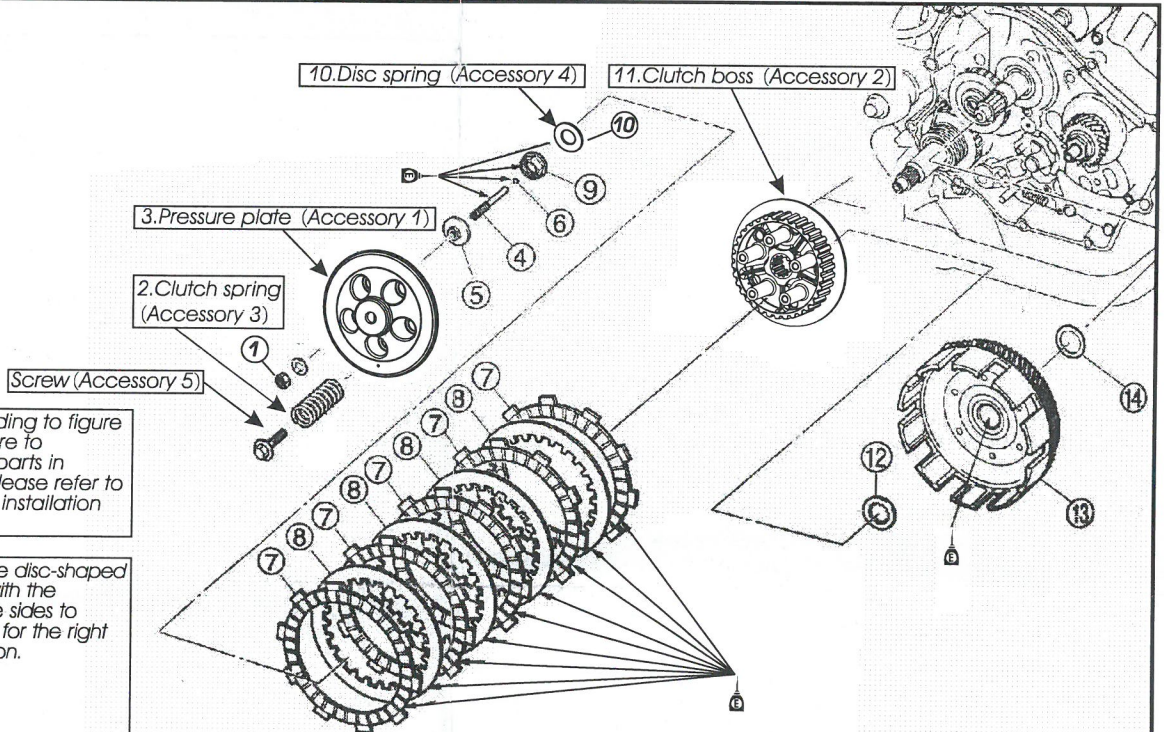

NOTE Please do according to figure in order. Make sure to disassemble the parts in opposite order. Please refer to the illustration for installation sequence.

CAUTION! Install the disc-shaped spring with the opposite sides to another for the right installation.

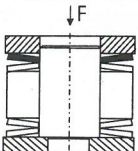

Correct positioning